


Connections, wireless Pushbuttons
Branchements, télécommande
Verbindungen, Funk-Fernbedienung
Conexiones, Pulsadores inalámbricos
Kopplingar, trådlös Tryckknappar

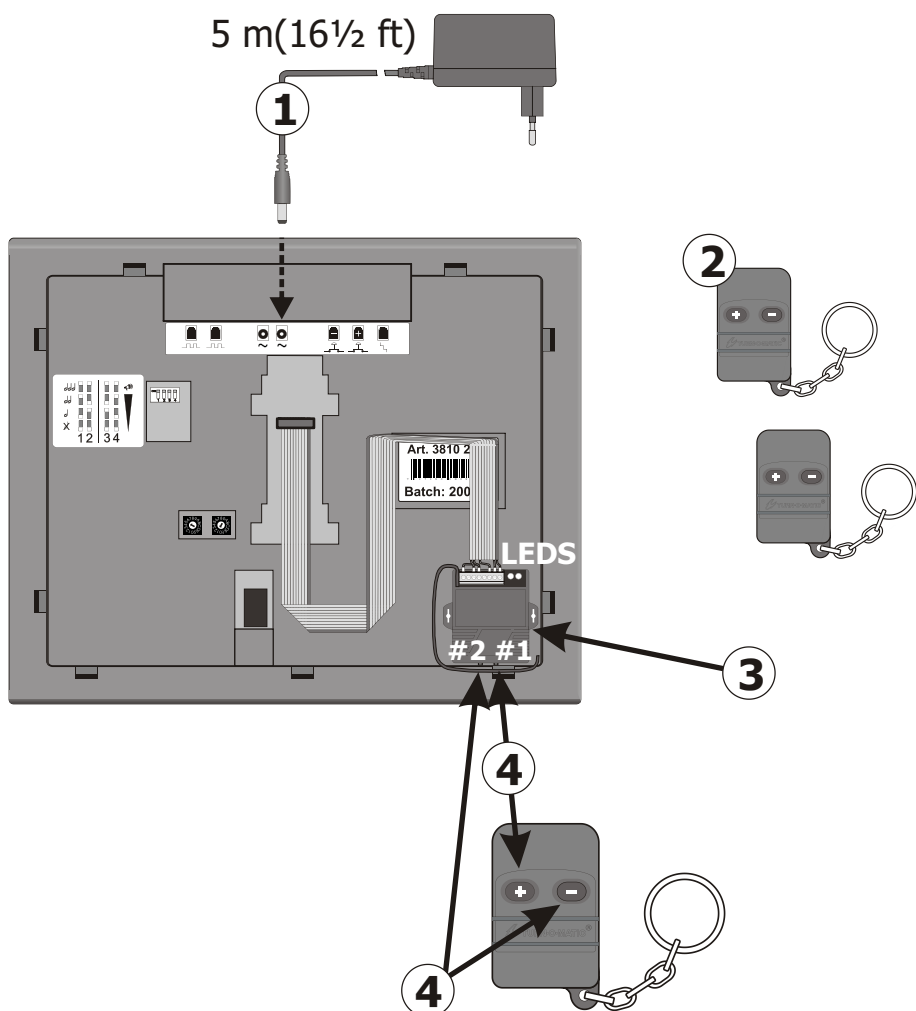

1. Plug in the power supply to one of the Indicator power ports. 2. Included wireless Pushbuttons are ready for use. 3. Optional additional wireless Pushbuttons; codes must be recorded in the Indicator Receiver. Max. Pushbuttons per Receiver = 15. 4. To record codes; Plug in the power supply to a mains outlet. Hold in Receiver switch #1 until the green LED starts blinking. Press Pushbutton (+) button, green LED will turn off. Hold in switch #2 until the red LED starts blinking. Press (-) button, red LED will turn off. Recorded codes cannot be changed, only all codes can be deleted for a new start. To delete all codes, hold switch #1 until the green LED starts blinking, release and hold again until the green LED blinks 2 times. Repeat for switch #2 with the red LED.	1. Enchufe la alimentación a uno de los puertos de alimentación del Indicador. 2. Los Pulsadores inalámbricos incluidos están listos para usarse. 3. Pulsadores inalámbricos adicionales opcionales; los códigos deben registrarse en el Receptor del Indicador. Máx. de Pulsadores por Receptor = 15. 4. Registro de los códigos; enchufe la alimentación a una toma de corriente de la red. Contenga el conmutador nº 1 del Receptor hasta que el LED verde comience a parpadear. Apriete el botón (+) del Pulsador, y el LED verde se apagará. Contenga el conmutador nº 2 hasta que el LED rojo comience a parpadear. Apriete el botón (-), y el LED rojo se apagará. Los códigos grabados no pueden cambiarse, y sólo se pueden borrar todos los códigos para un nuevo arranque. Para borrar todos los códigos, contenga el conmutador nº 1 hasta que el LED verde comience a parpadear; libérelolo y vuelva a contenerlo hasta que el LED verde parpadee 2 veces. Repita esto para el conmutador nº 2 con el LED rojo.
	1. Plugga in nättaggregat i en av Tablåns ström anslutningar. 2. Medföljande trådlösa tryckknappar är redo för användning. 3. Alternativt, ytterligare trådlösa tryckknappar; koder måste spelas in i Tablåns mottagare. Max. Tryckknappar per Mottagare = 15. 4. För att spela in koder; Plugga in nättaggregat till ett el uttag. Håll mottagare knapp #1 nere tills gröna LED börjar att blinka. Tryck tryckknappens (+) knapp, gröna LED ska slockna. Håll knapp #2 nere tills röda LED börjar att blinka. Tryck (-) knapp, röda LED ska slockna. Inspelade koder kan inte ändras, bara ALLA koder kan raderas för en ny start. För att radera ALLA koder, håll knapp #1 nere tills gröna LED börja att blinka, släpp knappen och håll nere igen tills gröna LED blinkar 2 gånger. Repetera för knapp #2 och röda LED.